



BMA0804, BMA0804-PO Input/output module

Application

The input/output module with 8 analog inputs and 4 analog outputs receives analog signals in the DDC4000e automation system and activates analog control functions. Manual/automatic rotary switch for controlling the 4 analog outputs. In manual mode, the output signal can be set in 10% increments 0..100% (0(2)..10 V DC).

LED displays for the operating states of the inputs and outputs.

Communication is controlled via LED.


Label carrier for system-specific description.

The power supply and the CAN bus are electrically isolated.

Data is transferred between the central unit and the input/output module via CAN bus.

The input/output module can be connected to an existing switch cabinet bus or fieldbus.

BMA0804-PO, additionally with LO and ID bus interface for communication with the touch module universal TMU-PO for the local override and indication device (LO and ID).

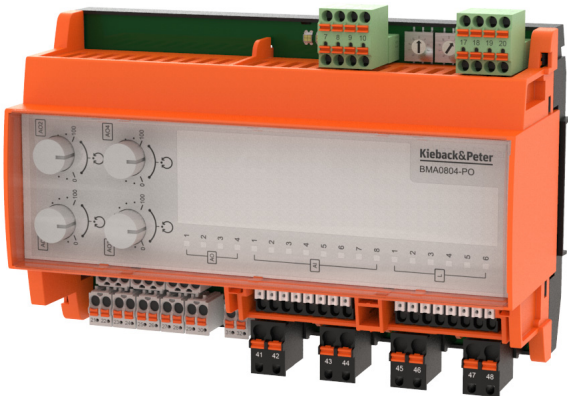

Content	Page
Important Information on Product Safety	2
Item	3
Technical Data	3
Dimensions	5
Connection	6
Installation	11
Mounting	12
Removal	12
Function and Operation	13
Commissioning	14
LED Indicators	15



Important Information on Product Safety

Safety instructions

This document contains information on installing and commissioning the product “BMA0804, BMA0804-PO”. Each person who carries out work on this product must have read and understood this document. If you have any questions that are not resolved by this document, you can obtain further information from the supplier or manufacturer.

If the product is not used in accordance with this document, the protection provided could be impaired.

The applicable regulations must be observed when installing and using the devices. Within the EU, these include regulations regarding occupational safety and accident prevention as well as those from the VDE (German Association for Electrical, Electronic & Information Technologies). If the device is used outside of the EU, it is the responsibility of the plant engineer or operator to comply with local regulations.

Mounting, installation and commissioning work on the devices may only be carried out by qualified technicians. Qualified technicians are persons who are familiar with the described product and who can assess given tasks and recognize possible dangers based on their technical training, knowledge and experience, as well as their knowledge of the applicable regulations.

Symbol meanings



WARNING

Indicates a hazard of medium risk which can result in death or serious bodily injury if not avoided.



CAUTION

Indicates a hazard of low risk which can result in minor or medium bodily injury if not avoided.



CAUTION

Indicates a hazard which can result in material damage or malfunctions if not avoided.



NOTE

Indicates additional information that can simplify working with the product.

Notes on disposal

In accordance with the applicable laws and directives of the European Union countries, the product should not be disposed of with household waste. This ensures environmental protection and sustainable recycling or raw materials.

Commercial users should contact their supplier and observe the conditions of the purchase agreement. This device may not be disposed of together with other commercial waste.

The local and currently applicable laws must be observed.



Item

BMA0804	Input/output module with 8 analog inputs and 4 analog outputs with 0..100% manual/automatic rotary switch for the analog outputs
BMA0804-PO	The same as BMA0804, plus LVB interface

Technical Data

Nominal voltage	12..24 V DC $\pm$ 10%; 2.5 W
Inputs and outputs	■ 4 analog outputs, 0(2)..10 V DC; maximum 2.5 mA ■ 8 analog inputs, See chapter "Sensor Types", page 5. ■ Separate auxiliary power (terminal 53, 56, 59) 10 V DC; Σ 70 mA for connecting external setting knobs ■ Support terminal blocks terminal "81" through "88" and terminal "91" through "98" - max. power load 230 V AC; 6 A (3 A)
Indicators and controls	■ 12 status LEDs for inputs and outputs ■ 6 freely configurable LEDs ■ 1 LED for displaying bus communication ■ 1 LED for displaying RS485 LVB bus communication, only with BMA08-04-PO ■ 4 manual/automatic rotary switches for automatic and manual operation of the analog outputs, 0.. 100% in 10% steps; DC 0(2)..10 V
Address switch	Addressing 01..63 through 2 rotary switches
Interfaces	■ CAN bus as: - Fieldbus, F-bus: 2000 m, 20 kBd or - Switch cabinet bus, SBM bus: 200 m, 40 kBd (note the special CAN bus settings. You can find further information in the DDC4000 project planning documentation) ■ LVB bus, 200 m; only with BMA0804-PO - PtP connection for the touch module universal TMU-PO for the LO and ID (LVB)
Housing	Plastic housing
Overvoltage category	III
Rated impulse voltage	800 V
Level of contamination	2
Method of operation	Type 1
Degree of protection	IP20
Ambient temperature	0..55 °C
Ambient humidity	20..80% r.h.; non-condensing
Installation position	360° vertical position
Mounting	TH 35x7.5 top hat rail in closed housing. This device is intended for installation in a wall-mounted enclosure or switch cabinet with protection class I or II.
Weight	0.22 kg
Dimensions	WxHxD: 143.5 x 90 x 60 mm



Product Description
BMA0804, BMA0804-PO

Connection clamps

- Spring-loaded terminals
- Twisting two conductors is not permitted, twin wire-end ferrules can be used

	Input terminals  Terminals 21..32 and 51..59	Output terminals  Terminals 41..48	Support terminals  Terminals 81..88 and 91..98	Bus terminals  Terminals 7..10 and 17..20
Single-wire conductor Conductor cross-section: Stripping:	0.5..1.5 mm ² 8 mm	0.5..2.5 mm ² 10 mm	0.5..1.5 mm ² up to 1 mm ² : 9 mm 1.5 mm ² : 10 mm	0.5..1.0 mm ² 10 mm
Multiwire conductor Conductor cross-section: Stripping:	0.5..1.5 mm ² 8 mm	0.5..2.5 mm ² 10 mm	0.5..1.5 mm ² up to 1 mm ² : 9 mm 1.5 mm ² : 10 mm	0.5..1.0 mm ² 10 mm
Multi-wire conductor with wire end sleeve and plastic collar Conductor cross-section: Wire end sleeve length:	0.5..1.0 mm ² 10 mm	0.5..1.5 mm ² 10 mm	0.5..1.0 mm ² 10 mm	0.5..1.0 mm ² 10 mm
Multi-wire conductor with wire end sleeve without plastic collar Conductor cross-section: Wire end sleeve length:	0.5..1.0 mm ² 10 mm	0.5..1.5 mm ² 10 mm	0.5..1.0 mm ² 10 mm	0.5..1.0 mm ² 10 mm
Required crimping	Square crimping	Square crimping	Square crimping	Square crimping


Sensor Types

Sensor type	Measuring range
0(2) V..10 V	0..100 %
KP10	-50..+150 °C
KP250	-50..+150 °C
ML2	-50..+150 °C
Ni100	-50..+150 °C
Ni1000 (DIN)	-50..+150 °C
Ni1000 (L&G)	-50..+150 °C
NTC1,8K	-50..+150 °C
NTC5K	-50..+150 °C
NTC10K	-40..+150 °C
NTC10KPRE	-40..+150 °C
NTC20K	-30..+150 °C
PT100	-100..+850 °C
PT1000	-100..+850 °C
Balco500	-40..+150 °C
Satchwell DC1100	-20..+120 °C
Satchwell DC1400	-40..+120 °C
Resistor (potentiometer)	0..500 kΩ



NOTE
You can find more information on the sensor types in the “Temperature Sensor Tables” product description (1.10-90.100-01).

Dimensions

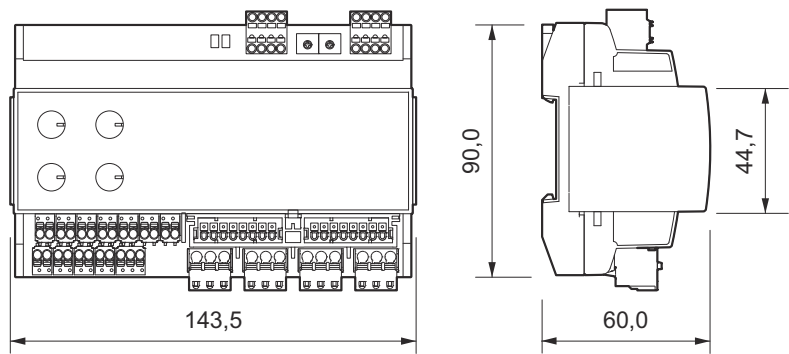



Product Description

BMA0804, BMA0804-PO

Connection




NOTE

The devices have galvanic isolation between the bus voltage supply and the inputs and outputs. This is a separation of duties that prevents unwanted ground loops.


Thanks to this functional separation, each module can provide its own ground plane that structurally prevents mass loops and potential shifts between the modules.

If the system layout requires it, however, the ground planes of the modules can also be connected without any issues.

- Two support terminal blocks, terminals "81" to "88" and terminals "91" to "98"

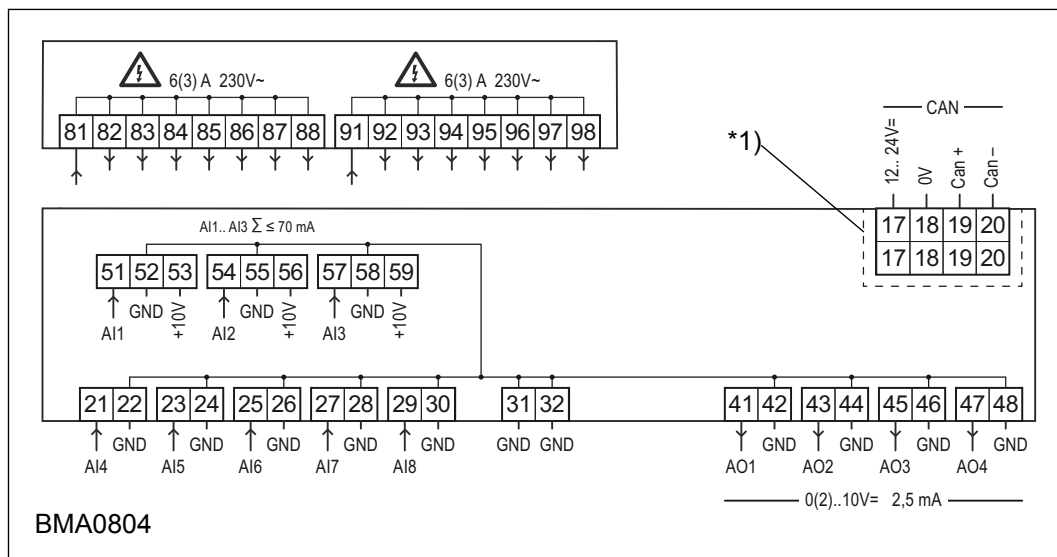


*1) Galvanic isolation

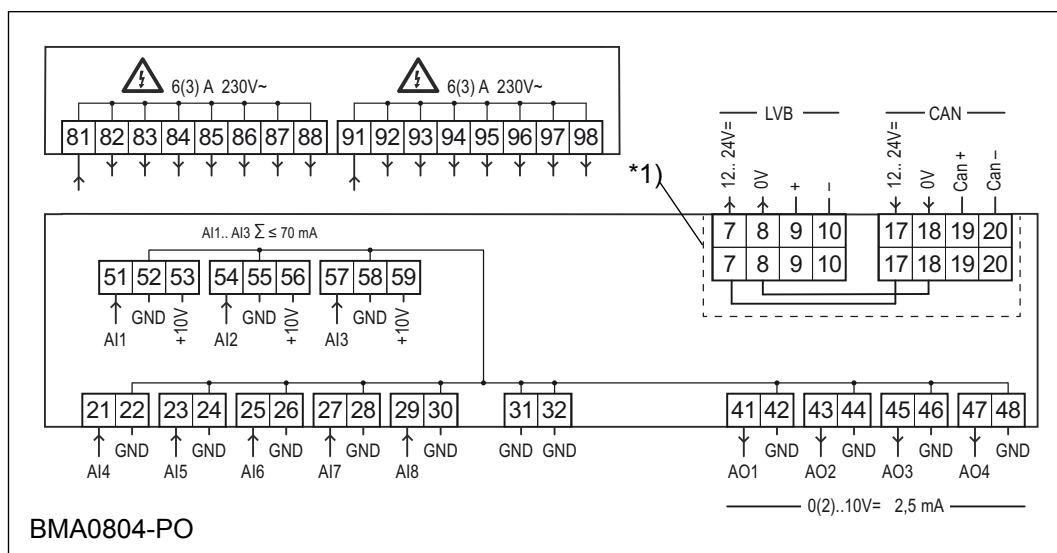


*1) Galvanic isolation

Connection of DDC4000e

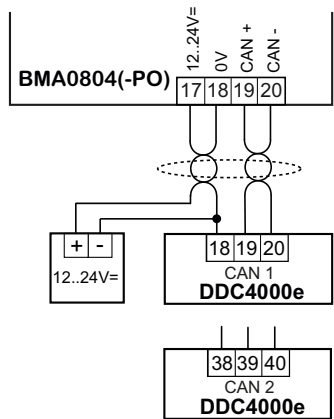

Connection of TMU-PO, only with BMA0804-PO

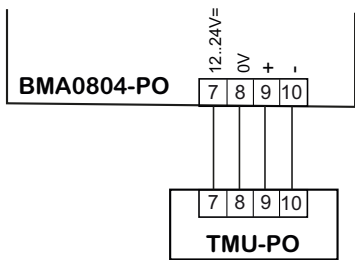




Product Description

BMA0804, BMA0804-PO

Connection of actuators and sensors

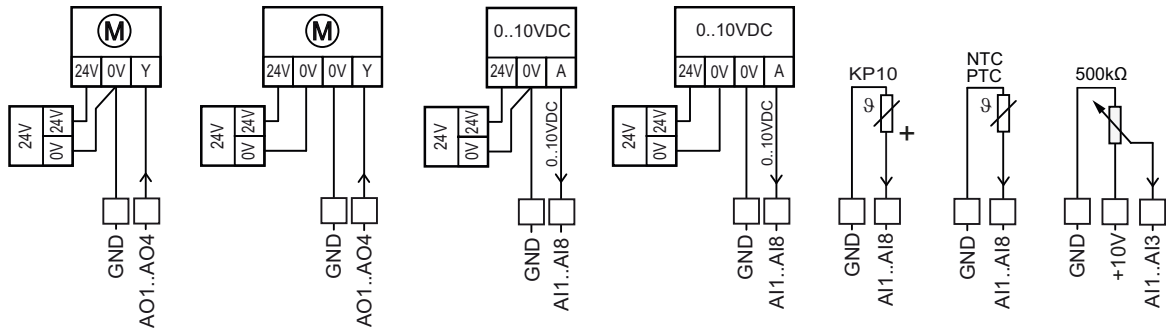

CAUTION


A negative input voltage on a measuring channel leads to a significant influence on all inputs. Therefore, all analog inputs (AI) are represented as invalid (???) in the "b" parameter in the pin object. This guarantees the measurement quality.



NOTE

If negative input voltages are to be expected due to the sensor used (e.g. in en:air plants with the differential pressure transmitter DE23 from Fischer), appropriate measures must be taken to limit the input voltage outside the module.

Example: Use of a diode in the component plug and matching terminal block

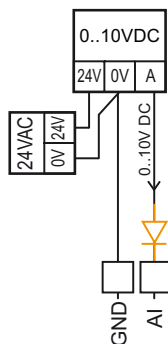


Diode: BAT86 (Schottky diode)
Component plug: Phoenix P-CO or equivalent
Terminal block: Phoenix PT 4-FSI/F GY or equivalent



Connection examples

- Connection of actuators using the support clamps (3 conductors)

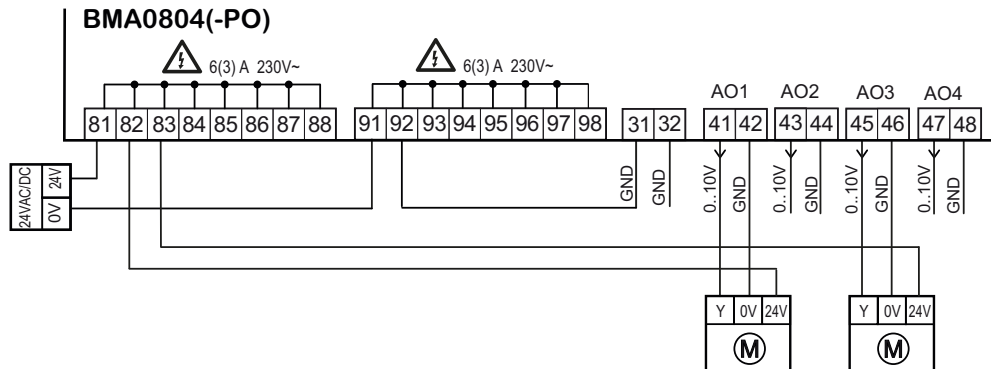


CAUTION

To ensure that the unit functions flawlessly, a GND connection between terminal “31” or terminal “32” and the GND (0 V) of the supply voltage field devices is required!

This GND connection can be made only when using safety extra-low voltage (nominal voltage $\leq$ AC/DC 24 V).

- Connection of actuators using the support clamps (4 conductors)

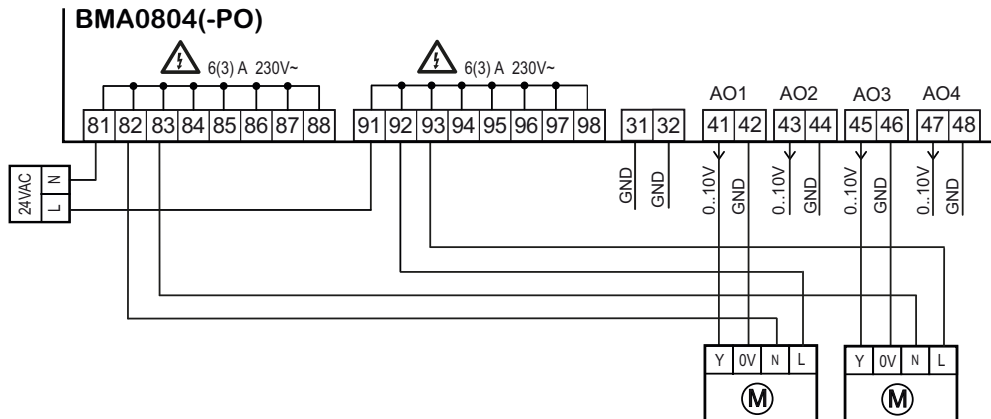


CAUTION

3-wire and 4-wire applications may not be mixed.



Product Description
BMA0804, BMA0804-PO

- Connection of several input/output modules via CAN bus

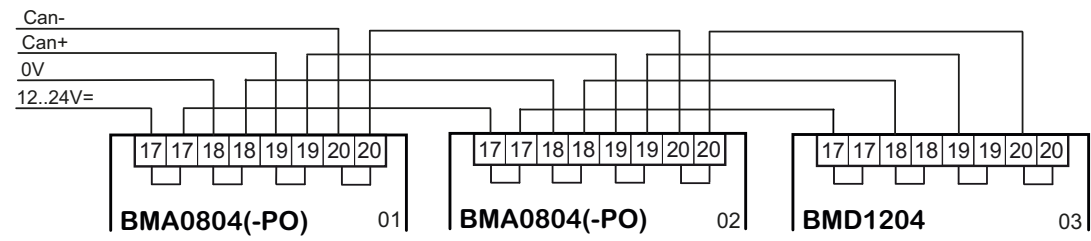

NOTE

The terminal block terminal “17” through terminal “20” (feed-through terminals) can be inserted and disconnected without interruption.



Installation



CAUTION

This product description contains the specific settings and functions of the input/output module. In addition to these instructions, the product descriptions of other system components, such as the DDC4000e automation station, are to be observed.



CAUTION

Switching on the power supply of unparameterized products can lead to unforeseen consequences such as malfunctions or material damage.

Switch on the power only after the device has been configured by the commissioning technician.



NOTE

The input/output module can be connected to an existing fieldbus or switch cabinet bus.

Further information can be found in the DDC4000 project planning documentation

Switch cabinet bus

When connecting the switch cabinet bus, use a cable of at least type JY(St)Y 2x2x0.8 Lg: two x two leads stranded into a pair, plastic insulation and an electrostatic shield with a lead diameter of at least 0.8 mm. Use a stranded pair of leads for the data lines (+ and -) and another free lead for the ground (0).

At the end of the switch cabinet bus (farthest point from the DDC controller), install a terminating resistor of about 180 ohms between both data lines (+ and -). The terminating resistor is included with the DDC controller

The maximum cable length for the switch cabinet bus is 200 m.

Fieldbus

When connecting the fieldbus, use a cable of at least type JY(St)Y 2x2x0.8 Lg: two x two wires, twisted to a pair with plastic insulation and an electrostatic shield with a wire diameter of at least 0.8 mm. Use a stranded pair of wires for the data lines (+ and -) and another free wire for the ground connection (0).

At the end of the fieldbus (furthest point from the DDC controller), install a terminating resistor of about 180 ohms between both data lines (+ and -). The terminating resistor is included with the DDC controller.

The maximum cable length for the Fieldbus is 2000 m.

LO and ID bus

When connecting the local override and indication device bus, use a cable of at least type JY(St)Y 2x2x0.8 Lg: two x two leads stranded into a pair, plastic insulation and an electrostatic shield with a lead diameter of at least 0.8 mm. Use a stranded pair of wires for the data lines (+ and -) and another free wire for the ground (0).

The maximum cable length for the local override and indication device bus is 200 m.








Mounting










WARNING

Contact with live parts of electrical domestic installation can cause death due to electric shock.
Mounting/removal may only be carried out when power is switched off.

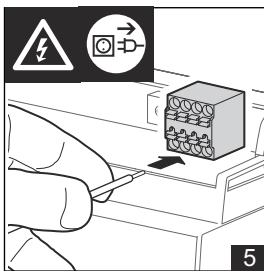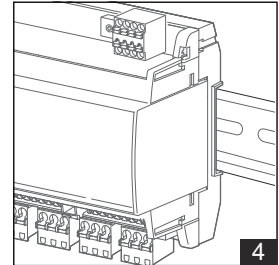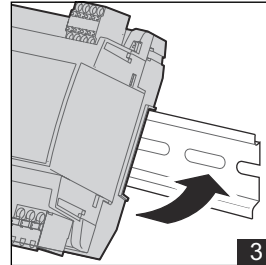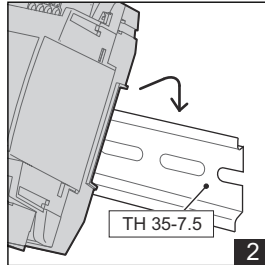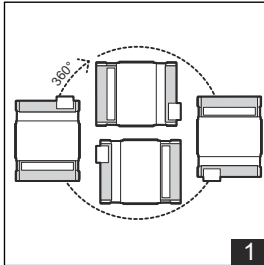


Removal

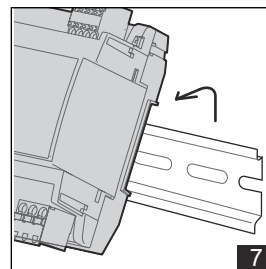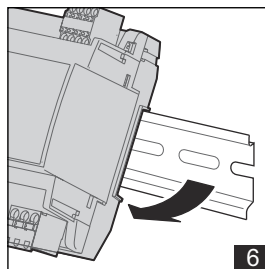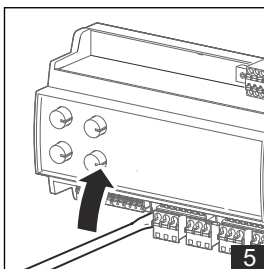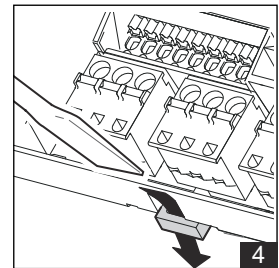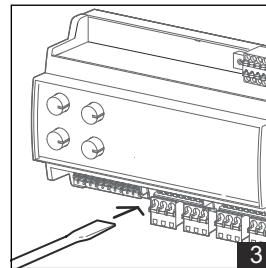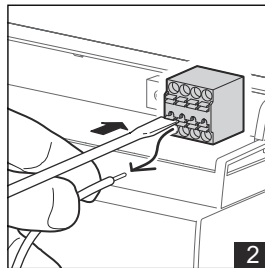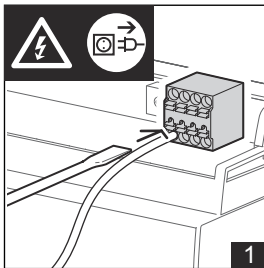



Function and Operation

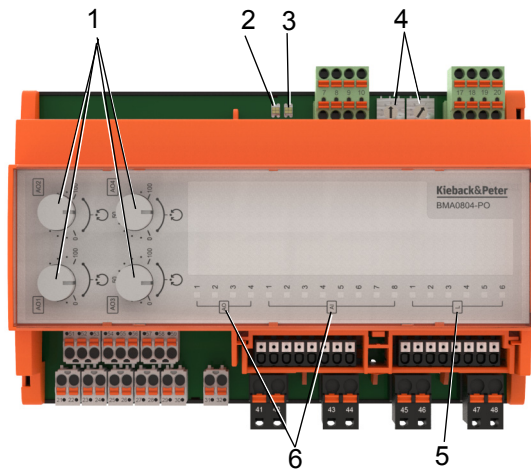

- (1) Manual / automatic rotary switch
☺ = auto, 0 ..50..100 = manual operation
- (2) Combination LED (green, red) for LO and ID bus only with BMA0804-PO
- (3) Combi LED (green, red) CAN bus
- (4) Address switch
- (5) Freely configurable LEDs
- (6) Status LEDs of inputs and outputs

Manual/automatic mode

You can use the manual/automatic rotary switches (1) to switch to the appropriate operating mode.

In manual mode, you use the manual/automatic rotary switches (1) to set the respective output signals in 10% steps within a range of 0..100%, depending on the parameterization (DC 2..10 V or DC 0..10 V).

The light intensity of the status LED (5) changes based on the output signal.



NOTE

In the event of a BUS or DDC failure, manual mode can be used as an emergency mode if it has not been permanently disabled using the parameterization.

Parameterization

The following functions are defined via parameterization:

- Permanent shutdown of the manual control
- Analog inputs can be configured according to the sensor type table
- Setting range of the analog outputs 2..10V DC or 0..10 V DC.
- Default value for the outputs in the event of bus failure or failure of the automation station



NOTE

Parameterization is retained in the event of a power failure.

Set address 99 to delete the parameterization.




Setting CAN Bus Address

Permitted range for the switch cabinet bus address: 01..63.

Permitted range for fieldbus address: 01..63.

- ▶ Set the first number of the bus address on the address switch, the second number on the second rotary address switch.

The example shows the address 15.

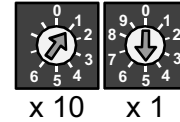

NOTE

On delivery, the address “00” is set, which means:

- No bus communication
- No parameterization possible
- Manual operation is effective. The 4 analog outputs can be switched in 10% increments (0..10 V DC). In automatic rotary switch position, the output is 0 V DC.
- Sensor inputs in test mode

Commissioning



CAUTION

Commissioning by switching on the supply voltage may occur only after the commissioning technician/engineer has finished configuring the DDC and has set the bus address.

- Configuration is described in the DDC controller project planning documentation.
- Before switching on the supply voltage, check the electric installation and the device connections.
- After configuring the device and switching on the supply voltage, check the functions of the module and the connected inputs and outputs.

Functional test

It is possible to check the correct wiring and function of the inputs and outputs.

- ▶ Set the bus address “00”.
- The function and wiring of the 4 outputs 0..10 V DC can be tested with the manual/automatic rotary switch.
- The correct polarity and wiring of the 8 AI1 through AI8 inputs can be checked with a diode and a resistor 180 Ω (series connection).

Target display:

- Open contact: Red LED
- Resistance diode combination correctly poled: Green LED

Possible wiring errors:

- Open contact: Green LED
- Resistance diode combination connection: Red LED



LED Indicators

LED CAN Bus

LED status (combination LED)	Meaning	Cause
off	Module not in operation	No operating voltage or operating voltage too low
Yellow on (green LED and red LED on)	Module in operation, but there is a bus error no CAN communication possible, module not logged on	Bus line short circuit (with respect to ground or each other), Bus lines reversed or interrupted
	Address 00 (manual operation effective, functional test possible)	
Yellow flashing (green LED and red LED flashing simultaneously) Flashing rate 1 sec.	Address error, no bus activity	Outside of address range #01..#63 address assigned multiple times
Green flashes and red LED off	Module OK, bus activity	
Red LED and green LED flash alternately slowly Flashing rate 6 sec.	Update is being transferred from DDC4000e to module	
Red LED permanent light	Address 99 (deleting the configuration, manual control effective)	

LED LVB bus, only for BMA0804-PO

LED status (combination LED)	Meaning	Cause
Off	TMU-PO Module not in operation	No operating voltage or operating voltage too low or no macro configured
Yellow on (green LED and red LED on)	TMU-PO Module in operation, but there is an LO and ID bus error; cannot communicate with the TMU-PO module	Short circuit on the bus lines (against the ground or each other), Bus lines mixed up or interrupted No operating voltage or operating voltage too low on the TMU-PO module
Green LED flashes and red LED off	TMU-PO Module OK, LO and ID bus activity	



Product Description

BMA0804, BMA0804-PO

Status of inputs and outputs

Outputs:

- 0..100% green, the luminosity of the LED changes depending on the output signal, 100% = full luminosity
- In manual mode, the output LEDs additionally flash yellow

Inputs:

- Sensor value valid: LED lights up green:
- Sensor value outside the measuring range: LED lights up red
- No sensor (sensor type) configured: LED off
- Negative voltage at the input falsifies the measuring signal: all input LEDs light up red. The affected input flashes red.
- The +10 V DC auxiliary voltage breaks down. Caused by incorrect wiring: LEDs of the 0/2..10 V DC inputs lights up red.