



ATH2070 Safety Temperature Limiter

Application

The safety monitors/limiters are DIN type-tested and are used for monitoring and limiting the temperature in heating and ventilation system pipelines.

The ATH2070 is equipped with two separate capillary measuring systems for safety temperature monitors (STM) and safety temperature limiters (STL), each with separately adjustable switch outputs, changeover switch and normally closed contact.



Content	Page
Important Information on Product Safety	2
Item	3
Technical Data	3
Accessories (not included in delivery)	3
Dimensions	3
Connection	4
Mounting and Installation	5
Adjusting the Nominal Value	5
Switching Functions	6



Product Description

ATH2070, ATH2070/2, ATH2070/90, ATH2070/120

Important Information on Product Safety

Safety instructions

This data sheet contains information on installing and commissioning the product “ATH2070, ATH2070/2, ATH2070/90, ATH2070/120”. Each person who carries out work on this product must have read and understood this data sheet. If you have any questions that are not resolved by this data sheet, you can obtain further information from the supplier or manufacturer.

If the product is not used in accordance with this data sheet, the protection provided could be impaired.

The applicable regulations must be observed when installing and using the devices. Within the EU, these include regulations regarding occupational safety and accident prevention as well as those from the VDE (German Association for Electrical, Electronic & Information Technologies). If the device is used outside of the EU, it is the responsibility of the plant engineer or operator to comply with local regulations.

Mounting, installation and commissioning work on the devices may only be carried out by qualified technicians. Qualified technicians are persons who are familiar with the described product and who can assess given tasks and recognize possible dangers based on their technical training, knowledge and experience, as well as their knowledge of the applicable regulations.

Symbol meanings



WARNING

Indicates a hazard of medium risk which can result in death or serious bodily injury if not avoided.



CAUTION

Indicates a hazard of low risk which can result in minor or medium bodily injury if not avoided.



CAUTION

Indicates a hazard which can result in material damage or malfunctions if not avoided.



NOTE

Indicates additional information that can simplify working with the product.

Notes on disposal

In accordance with the applicable laws and directives of the European Union countries, the product should not be disposed of with household waste. This ensures environmental protection and sustainable recycling or raw materials.

Commercial users should contact their supplier and observe the conditions of the purchase agreement. This device may not be disposed of together with other commercial waste.

The local and currently applicable laws must be observed.



Item

ATH2070	Safety temperature monitor and safety temperature limiter, temperature range 30 °C to 110 °C, 120 mm thermowell
ATH2070/2	As ATH2070, but with a 200 mm thermowell
ATH2070/90	As ATH2070, but with a temperature range of 30 °C to 90 °C
ATH2070/120	As ATH2070, but with a temperature range of 20 °C to 120 °C


Technical Data

Output	1 changeover switch for STM, max. AC 230 V, 10 (2)A 1 break contact for STL, max. AC 230 V, 10 (2)A Switching difference for changeover switch approx. 5 K
Thermowell	Brass, Ø 15 mm; G½; PN 16 ATH2070/2 = 200 mm (nickel-plated brass) ATH2070; ATH2070/90; ATH2070/120 = 120 mm
Measuring element	Two separate self-monitoring capillary measuring systems for STM and STL
Connection	Screw terminals
Cover pins	Lead-sealable screws
Certification	Tested according to DIN EN 14597 Registration number STM(STL)/STL906S
Degree of protection	IP 54
Ambient temperature	Max. 80 °C at the switch button
Weight	0.76 kg

Accessories (not included in delivery)

Z8/12	PN40 thermowell for ATH2070, ATH2070/90, ATH2070/120 Stainless steel 1.4571; Ø 15 mm; 120 mm; G½
Z8/20	PN40 thermowell for ATH2070/2 Stainless steel 1.4571; Ø 15 mm; 200 mm; G½

Dimensions

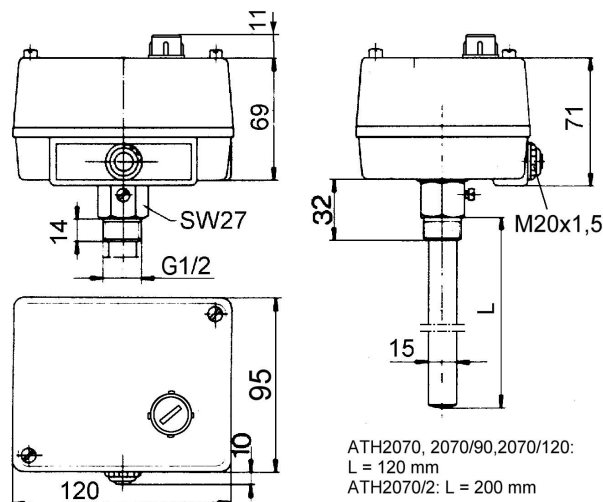




Product Description

ATH2070, ATH2070/2, ATH2070/90, ATH2070/120

Connection

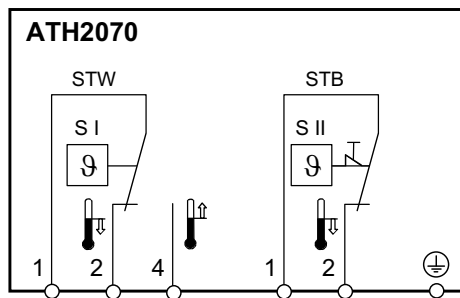

Mounting and Installation



WARNING

Contact with live parts of electrical domestic installation can cause death due to electric shock. Only connect the device and switch on the power supply if you are qualified to do so. Be sure to comply with VDE guidelines and local wiring regulations.



CAUTION

In addition to the generally valid mounting guidelines for working on pipelines, the following must be observed:

- There may be no temperature stratifications in the pipeline at the mounting location.
- The medium must flow freely around the entire thermowell with the capillary measuring system, and must face against the direction of flow. A pipe elbow is an ideal mounting location.
- Use a wrench (27 mm) to secure the thermowell shaft (G $\frac{1}{2}$).
- In order to prevent moisture (condensate/pipe leakage) from entering the connection housing, the cable entry should point downwards.
If that is not possible, make a downward-facing loop in the connection cable.



Adjusting the Nominal Value

- Switch off the mains power supply.
- Remove the cover (2 screws).
- Set the limiting value (switch point) for the safety temperature monitor (STM) on the setting screw using a screwdriver.
- Set the limiting value for the safety temperature limiter (STL) on the setting screw using a screwdriver.
- Replace the cover and screw tightly into place.




CAUTION

Do not attach the cover the wrong way around. The button in the cover must be positioned above switch II.

- Switch on the mains power supply.

Switch arrangement under the cover

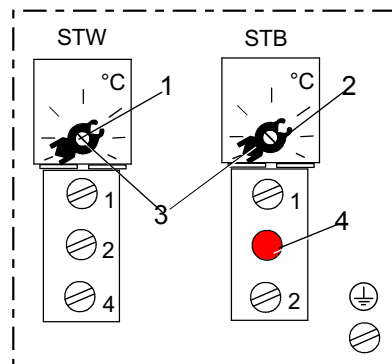

- (1) Setting screw for STM
- (2) Setting screw for STL
- (3) Limiting value display
- (4) Reset button

Switch I (S I) Switch II (S II)

Switching Functions

- Safety temperature monitor (STM)

If the temperature rises to or exceeds the set STM limiting value, the changeover switch (switch I) switches from terminals 1 - 2 to 1 - 4.

If the temperature falls to approx. 5 K below the nominal value, the changeover switch resets.
- Safety temperature limiter (STL)

If the temperature rises to or exceeds the STL limiting value, the break contact is switched off and locked (switch II, terminals 1 - 2). The red reset button on switch II pops out. The switch system can only be unlocked after the temperature falls below the STL limiting value.

The system is only unlocked when the cover is attached: Let the temperature cool down. Unscrew the protective cap on the cover and press the button. Reattach the protective cap afterwards.

The measuring system is self-monitoring. This means that the same switching function is made when the capillary measuring system is interrupted as when the limiting values are reached.



Product Description

ATH2070, ATH2070/2, ATH2070/90, ATH2070/120